


Fridge-Freezer / Réfrigérateur-Congélateur / Kühl-Gefrierkombination / Frigorifero-Congelatore /  
Koel-Vriescombinatie / Køle-Fryseskab / Frigorifico-Congelador

**INSTRUCTION BOOK**  
**NOTICE D'UTILISATION**  
**GEBRAUCHSANWEISUNG**  
**ISTRUZIONI D'USO**  
**GEBRUIKSAANWIJZING**  
**BRUKSANVISNING**  
**INSTRUCCIONES DE USO**  
**INSTRUÇÕES DE USO**

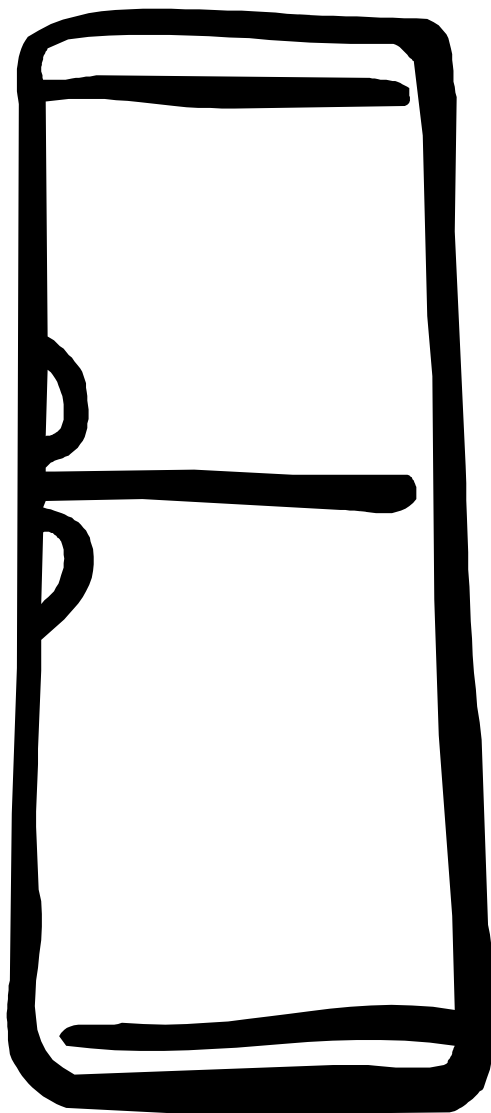

ERB3400, ERB3400X

GB

FR

DE

IT

NL

DK

ES

PO

# Safety instructions

GB

Your new fridge/freezer may have other functions compared to your previous one.

Carefully read these instructions to learn how the appliance works and how to care for it. Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

**These warnings are provided in the interests of your safety.** Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

## For the User

- The cabinet is intended for keeping foodstuff in a normal household as explained in this instruction booklet.
- Do not keep explosive gases or liquids in the refrigerator or freezer compartment. They may explode and cause injury and material damage.
- Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured, the cabinet will be damaged and foodstuff inside may spoil.
- Do not keep carbonised drinks or bottles in the freezer compartment. The glass bottles may break.

- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

## Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.

## Scrapping old cabinets

When discarding the cabinet, hand it over to a recycling station. For more information, call your local city office or your dealer.

# Contents


GB

<b>Safety instructions</b>	<b>2</b>
Scrapping old cabinets	2
<b>Contents</b>	<b>2</b>
<b>Description of the Appliance</b>	<b>3</b>
Control Panel	4
<b>Before use</b>	<b>4</b>
<b>Using the fridge</b>	<b>4</b>
To start the fridge and set the correct temperature	4
Temperature inside the fridge	5
Measuring the temperature	5
Switching off	5
Alarms and other features	6
Cabinet interior	6
<b>Using the freezer</b>	<b>6</b>
To start the freezer and set the correct temperature	6
Temperature inside the freezer	7
Alarms and other features	7
Switching off	8
Freezing	8
Suitable storage periods	9
Thawing	9
Cabinet interior	9

<b>Hints and Tips</b>	<b>10</b>
Saving energy	10
Food Storage	10
Protect the environment	10
<b>Maintenance and Cleaning</b>	<b>11</b>
Removing the ventilation grille	11
Cleaning	11
Defrosting the fridge	11
Defrosting the freezer	12
To Change the Light Bulb	12
When the appliance is not in use	12
<b>Something Not Working</b>	<b>13</b>
Guarantee Conditions	14
Customer Care Department	14
Service and Spare Parts	14
<b>Technical specification</b>	<b>15</b>
<b>Installation</b>	<b>15</b>
Unpacking	15
Remove the transport supports	15
Cleaning	15
Installing the cabinet	16
Door Reversal	17
Electrical connection	17


# Description of the Appliance

GB

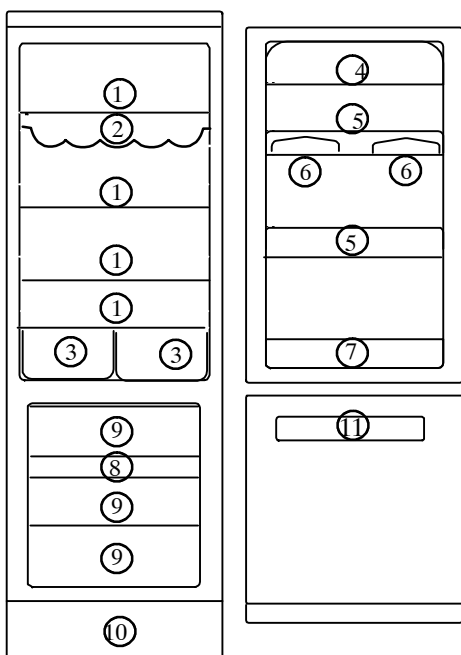

Model ERB3400


1. Glass shelf
2. Bottle shelf
3. Vegetable drawer
4. Butter compartment
5. Door shelf
6. Egg tray
7. Bottle shelf
8. Freezing tray
9. Freezer drawer
10. Ventilation grille
11. Freezer calender

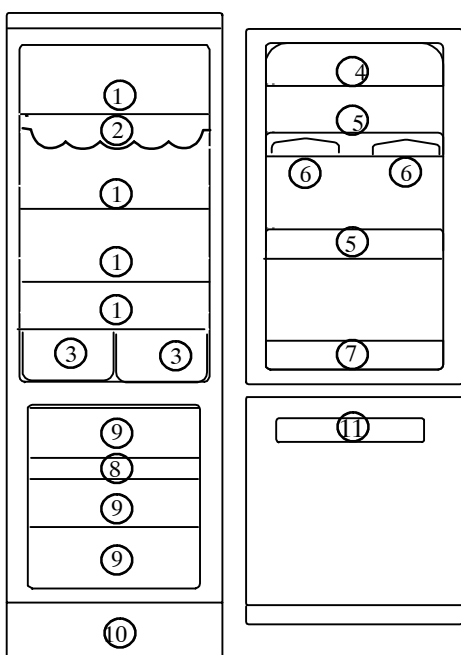

Model ERB3400X

1. Glass shelf
2. Bottle shelf
3. Vegetable drawer
4. Butter compartment
5. Door shelf
6. Egg tray
7. Bottle shelf
8. Freezing tray + accumulator
9. Freezer drawer
10. Ventilation grille
11. Freezer calender

## Control Panel

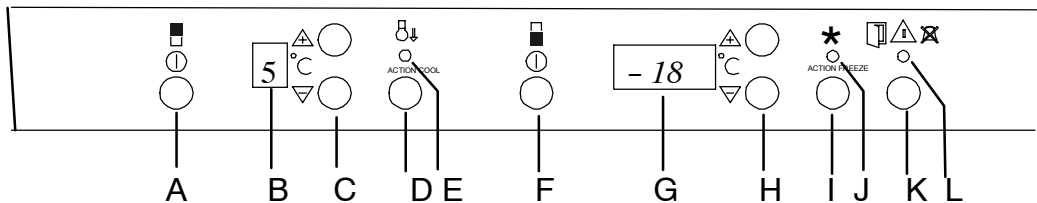

### A. Refrigerator power switch

Switches the refrigerator on and off.

### B. Temperature display

Shows the average temperature inside the refrigerator.

### C. Temperature adjustment buttons/thermostat

Used to set the temperature in the refrigerator.

### D. ACTION COOL button

Used to switch the Action Cool feature on and off.

### E. Yellow indicator lamp

Lights when Action Cool is operating.

### F. Freezer power switch

Switches the freezer on and off.

### G. Temperature display

Shows the highest temperature inside the freezer.

### H. Temperature adjustment buttons/thermostat

Used to set the temperature in the freezer.

### I. FAST FREEZE button

Used to switch the Fast Freeze feature on and off.

### J. Yellow indicator lamp

Lights when fast Freeze is operating.

### K. Alarm shut-off button

Used to turn the audible alarm off.

### L. Red warning lamp

Flashes when one of the alarms in the cabinet has been triggered.

## Before use


GB

Position and clean the cabinet as explained in the section "Installation".

Check that the drain hose at the rear of the cabinet discharges into the drip tray.



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 30 minutes, or for 4 hours if it was transported horizontally. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

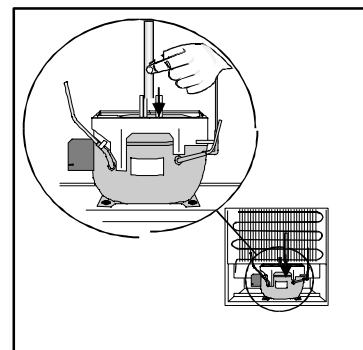


## Using the fridge

GB

### To start the fridge and set the correct temperature

#### Switching on:

 Switch on the fridge by pressing the power switch.



## Setting the temperature

Press the buttons until the desired temperature flashes in the temperature display (The temperature can be set between +1°C and +9°C.)

 
"+" raises the temperature.

"-" lowers the temperature.

Once set, the temperature display shows "-" until the temperature inside the fridge reaches +9°C or below. Allow the cabinet to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the cabinet.

It is not necessary to reset the temperature when the cabinet is switched on after it has been out of use.

The thermostat recalls the previously set temperature.



## Temperature inside the fridge


A suitable temperature inside the fridge is approx. +5°C. If the thermostat control is set to a too cold temperature, food with a high water content may start to freeze if it has been placed in the coldest places in the fridge. The picture shows the coldest and warmest places inside the fridge.

(+ warm, - cold)

Meat, fish and milk should be put in the coldest part of the cabinet.


The temperature will be affected by:

- How often the door is opened
- How much food is stored
- Position of the appliance (See chapter Installation)

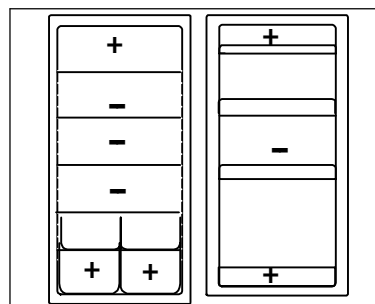


## Measuring the temperature

If the temperature is measured using a standard, single thermometer, this should be put in a glass of water centrally placed inside the cabinet. This will reflect the temperature inside the food products. Do not place the thermometer hanging or lying directly on the shelf.

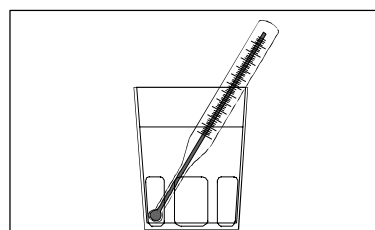

### Hints:

- Distribute foodstuffs to allow cold air to circulate freely between the products.
- Do not place food products directly against the cooling plate on the rear wall since they may freeze in this case.
- Also never put warm products into the cabinet. Wait until they have cooled down.
- Cover all foods properly to avoid odours and flavours from tainting other food.

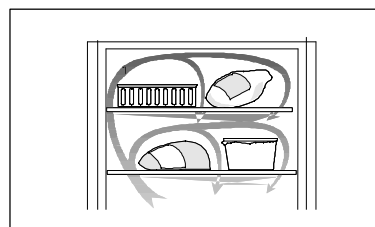


## Switching off

Switch off the cabinet by pressing the power switch. Keep the button pressed for approx. 1 second.



 Power to the cabinet is completely interrupted only when the power plug is disconnected or the fuse is removed.



## Alarms and other features

### Door open alarm

If the fridgedoor remains open for more than 5 minutes, the red warning lamp starts flashing and an audible alarm sounds.

 
 
To switch off the alarm:

Press the "alarm shut-off button". The red warning lamp goes out when the door is closed.

### Action cool

Use Action Cool to refrigerate a large quantity of products. When Action Cool is switched on, the temperature is automatically set to +2°C.

"A" is then displayed in the temperature display and the yellow indicator lamp lights. After about 6 hours, Action Cool is switched off and the temperature gradually returns to the previously set temperature. It is possible to switch off Action Cool manually by pressing the Action Cool button once more.



## Cabinet interior

The shelves and door compartments are removable and can easily be re-arranged.




Certain shelves must be lifted up by the rear edge to enable them to be removed.

The lower door compartment and the glass shelf above the vegetable drawer must not be moved.

They are required for proper air circulation inside the cabinet.

Shelves with a raised edge should be placed with the raised edge facing the rear wall of the cabinet, and thus prevent food products from touching the cooling plate.

The vegetable drawer has a removable plate to separate different vegetables.

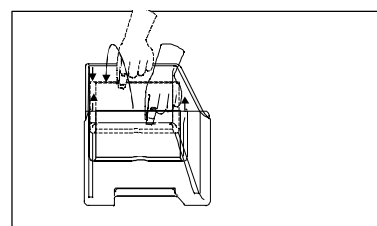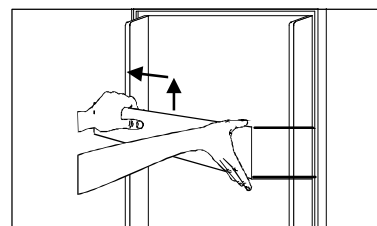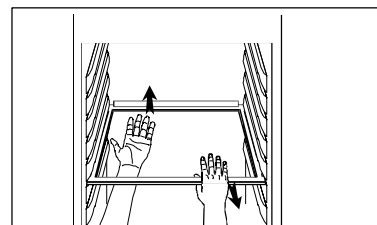

## Using the freezer

 
 
GB

### To start the freezer and set the correct temperature

#### Switching on:

Switch on the freezer by pressing the power switch.

The alarm sounds if the temperature inside the freezer reaches room temperature. Turn off the alarm by pressing the switch-off button.



## Setting the temperature

Press the buttons until the desired temperature blinks on the temperature display. (The temperature can be set between  $-15^{\circ}\text{C}$  and  $-24^{\circ}\text{C}$ .)

"+" increases the temperature.

"-" decreases the temperature.

Once set, the temperature display shows the current temperature inside the freezer.

Allow the cabinet to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the cabinet.

It is not necessary to reset the temperature when the cabinet is switched on after it has been out of use.

The thermostat recalls the previously set temperature.

## Temperature inside the freezer

To ensure that foodstuff will keep for a long time, be sure that the temperature inside the freezer is  $-18^{\circ}\text{C}$  or below. Please note, however, that the energy consumption increases as the temperature decreases. The built-in temperature display shows the warmest temperature inside the freezer. If the temperature is measured using a thermometer, put it between the products since this will reflect the real temperature in the frozen products. It is normal that the built-in temperature display shows a temperature slightly above that measured in other ways.

## Alarms and other features

### Door open alarm

If the door remains open for more than about 1 minute, the red indicator lamp starts flashing and an audible alarm sounds.

To switch off the alarm:

Press the alarm shut-off button. As long as the door remains open, the audible alarm will sound anew at 1-minute intervals. The red indicator lamp goes out when the door is closed.

### Temperature alarm

 
 
 
If the temperature rises above  $-12^{\circ}\text{C}$ , the red warning lamp flashes and an audible alarm sounds. The temperature display will then start to flash.

To switch off the alarm:

Press the alarm shut-off button to switch off the audible alarm. The temperature display will stop flashing.

The red warning lamp goes out when the temperature inside the freezer again falls below  $-11^{\circ}\text{C}$ .

Find out what caused the alarm. See the chapter "Something not working".



## Temperature memory

The temperature memory shows when an alarm has been triggered in the cabinet.

The temperature memory operates as follows:

When the temperature inside the freezer again falls below  $-11^{\circ}\text{C}$  the audible alarm stops. The temperature display and the red warning lamp will flash to indicate that an alarm was triggered. When the alarm shut-off button is pressed, the display then displays the warmest temperature inside the cabinet during the alarm phase and the display stops flashing. By referring to the temperature display indication, it is possible to decide whether or not to discard the products inside the freezer.

At about  $-12^{\circ}\text{C}$ :

Most food products can be immediately re-frozen. Ice cream is especially sensitive to temperature changes and should be consumed as soon as possible.

At  $-9^{\circ}$  –  $-2^{\circ}\text{C}$ :

Food products should be prepared (cooked) prior to eating or re-freezing them.

## Switching off

Switch off the cabinet by pressing the power switch. Keep the button pressed for approx. 1 second.



Power to the cabinet is completely interrupted only when the power plug is disconnected or the fuse is removed.

## Freezing

You need not press the fast-freezing button when freezing smaller quantities of food during any 24-hour period.

 
 
In all other cases, press the fast-freezing button approx. 24 hours prior to placing the food in the freezer.

Fast-freezing is automatically switched off 48 hours after the button has been pressed.

Fast-freezing can be discontinued by pressing the fast-freezing button once again.

The yellow fast-freezing lamp remains lit as long as the fast-freezing button is engaged.


A" (ACTION FREEZE) is displayed in the temperature display.





### Practical advice on freezing

- When freezing products, use the top shelf, and if necessary the shelf beneath that.
- Place the foods directly on the freezer shelves.
- Spread out the products as much as possible to allow air to circulate between them.
- Do not place food products which are to be frozen directly against other frozen food.  
The heat from the unfrozen food may cause the frozen food to thaw on the surface.
- Once frozen, re-arrange the products and put them as close as possible to each other.  
The food will then stay cold longer in the event of a power failure.
- When freezing large amounts of food/provisions, the accumulator moves to the tray/space nearest to the lower freezing shelf.
- Do not freeze too much food at the same time.  
The freezing capacity of the unit is indicated in the specifications section.

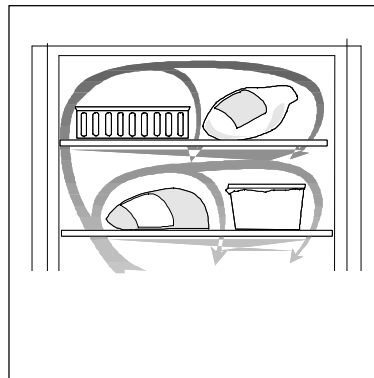

Check that the cabinet is operating and keeps the set temperature one day after switching it on for the first time. Only after then should the freezer be used to freeze fresh foodstuff.

### Suitable storage periods

Food purchased in frozen condition: Follow the advice on the maximum storage period indicated on the packaging.

Fresh food frozen at home:

Fatty and salty food should not be kept frozen for more than three months. Cooked food and low-fat food may be kept up to about six months. Lean food and berries can be kept for approximately one year.

### Thawing

It is best to use the fridge to thaw food. Place the foodstuff on a plate with a raised edge to prevent liquids from running out. To quickly thaw food, put it in room temperature or in cold water. When using a microwave oven to thaw foodstuff, follow the manufacturer's instructions.

### Cabinet interior



#### Freezer drawers

The freezer drawers make it easy to quickly and easily find the food package you want. To gain space, the drawers can be removed and the products can be put directly on the shelves. On all shelves, except the top shelf, it is possible to place products that protrude 20 mm from the front edge. This allows maximum use of the available space.

Do not remove the bottom drawer. It is required to assure proper air circulation.

#### Freezer tray

Use the freezer tray to freeze berries and vegetables. After about 4 hours the food will be thoroughly frozen and can then be packaged normally. Food that is frozen in this way will not stick together, enabling you to use only the amount required.

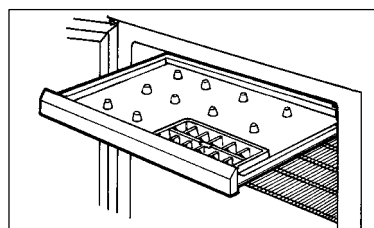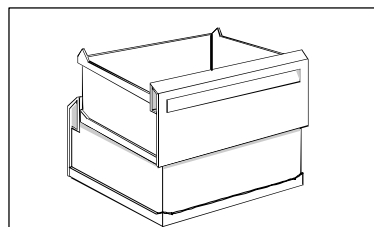

Model ERB3400X

### **Cold accumulator**

The cold accumulator will keep the food cold for longer after a power failure. The cold accumulator will be most effective when placed at the front of the fast-freezing tray. When freezing large amounts of food/provisions, the accumulator moves to the tray/space nearest to the lower freezing shelf.



When defrosting:

Place the cold accumulator on top of the frozen food to keep it cold.

### **Ice cubes**

Fill the ice tray to max. 3/4 since water expands as it freezes. Release the ice cubes by twisting the ice tray.

If ice cubes are kept for a long time, they will dry out and the taste is affected. Thus, throw away old ice cubes and prepare new ones when needed.

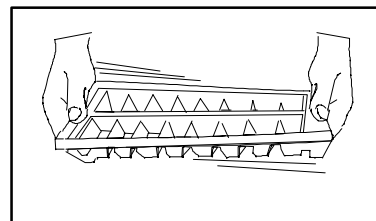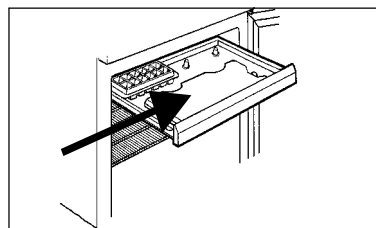

GB

## **Hints and Tips**

### **Saving energy**

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door to frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Always leave warm food to cool down to room temperature before placing in the fridge.
- Food which is to be frozen (when cool) should be placed in the fridge before being transferred to the freezer.
- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.
- Carefully follow the advice on freezing products in the section "Using the freezer". This will prevent wasting energy.
- Do not set the temperature too low in the freezer. A suitable temperature is in the range of -18°C to -20°C .
- Defrost the freezer when the frost layer reaches a thickness of 3-5 mm.
- Make sure the door gasket is complete and always clean.

### **Food Storage**

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larger compartment.
- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best.

Remove suspect food from your refrigerator and clean, refer to cleaning and maintenance.

### **Protect the environment**

- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local council or Environmental Health office for more information.
- Keep foodstuff in re-usable containers. Cut down on disposable material as much as possible.
- When cleaning the cabinet, use a mild washing-up detergent.
- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

# Maintenance and Cleaning

GB

## Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

## Cleaning

Clean the cabinet at regular intervals.



Don't use detergents, abrasive powders, high perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol when cleaning the product

## Disconnect the appliance from electricity supply.

### Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water)

Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

Clean out the drip channel inside the fridge at regular intervals and ensure that the drip channel is clear at all times. If blocked carefully clear using a piece of flexible curtain wire inserted into the drain outlet to remove the blockage.

### External Cleaning





Wash the outer cabinet with warm soapy water.

Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

## Defrosting the fridge

The fridge is defrosted automatically every time the compressor stops. Frost formation can be prevented by:

- not putting warm foodstuff inside the cabinet.
- avoiding frequently opening the door or keeping it open too long.
- do not place foodstuffs directly against the cold cooling plate.

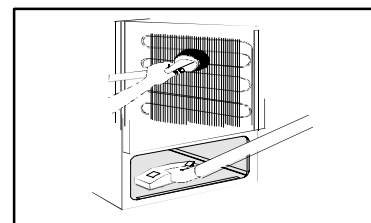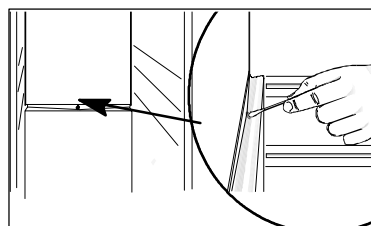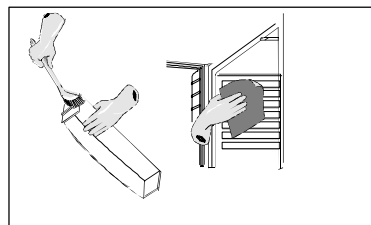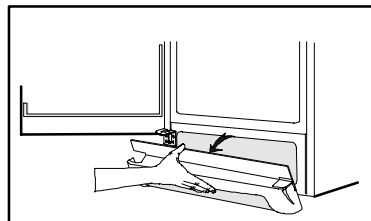

When moving the cabinet, lift it by the front edge to avoid scratching the floor.

## Defrosting the freezer

A certain amount of frost will always form on the freezer shelves and around the top compartment. Defrost the freezer when the frost layer reaches a thickness of about 3-5 mm.

Remove the freezer drawers and place them on top of each other by turning every other drawer one half turn. Put insulating material around the drawers, e.g. blankets or newspapers.

The frozen products can also be packed closely together and be kept in a cold location, e.g. in the fridge.

Defrosting can be accelerated by placing bowls with hot water (not boiling) inside the freezer.

Take out the drain spout and place it in the bottom freezer drawer where water can collect.

Loosen the ventilation grille to enable the bowl to fit under the drain spout.




Carefully scrape off the ice when it starts to thaw.

Use a wood or plastic scraper. Do not use sharp objects as these may damage the interior.

When all the ice has melted, clean and wipe the cabinet dry, then push the drain spout back in place. Switch on the cabinet and replace the frozen foodstuff.



Never use a hair drier or other heating appliances to speed up defrosting. Excessive heat may damage the plastic interior, and humidity could enter the electric appliance making it live.

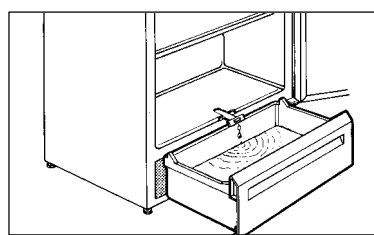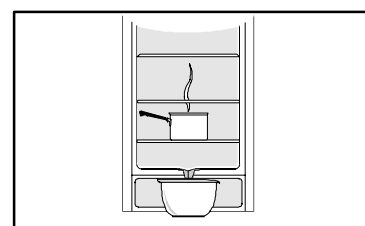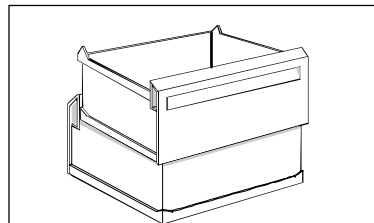


## To Change the Light Bulb

The light is switched on automatically when the door is opened. Before replacing the light bulb, disconnect the power plug from the outlet.

2. Cut the packaging around the bulb socket.

3. Keep the packaging on to hold the bulb when setting it into the socket. Do not touch the bulb with your bare fingers. Halogen light bulbs are sensitive to grease from the skin.

Use a clear, UV-blocked, low-pressure type halogen light bulb. Socket G4. Voltage 12 V. Power rating 20 W/bulb.

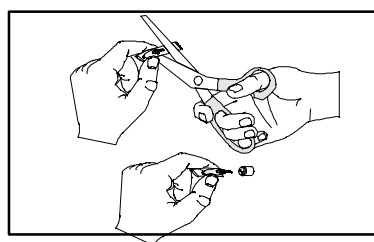

## When the appliance is not in use

**Disconnect the appliance from electricity supply.**

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

# Something Not Working



Before contacting your local Service Force Centre check the following point:

Problem	Possible cause / Remedy
<p>"□" is displayed in the temperature display.</p> <p>Or</p> <p>The yellow Action Freeze and red warning lamp both flash.</p>	<p>An error has occurred in measuring the temperature. Call your service representative. (The cooling system will continue to keep food products cold, but temperature adjustment will not be possible.)</p>
<p><b>Audible alarm + flashing red warning lamp.</b> (It is too warm inside the freezer.)</p>	<p>Switch off the audible alarm by pressing the alarm shut-off button.</p> <p>The audible alarm could have been triggered by:</p> <p>The cabinet having been recently switched on and the temperature still being too high. See the chapter "Switching on and setting the temperature".</p> <p>The door may have been open for so long that the 'door open' alarm was triggered.</p>
<p><b>It is too warm inside the refrigerator.</b></p>	<p>Set a lower temperature.</p> <p>Put food products in the right place inside the refrigerator. See the chapter "Temperature inside the refrigerator".</p> <p>Distribute the food products to allow cold air to circulate around them.</p> <p>Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>
<p><b>It is too cold inside the refrigerator.</b></p>	<p>Set a warmer temperature.</p> <p>Vegetables and other products that are easily frozen have been placed on a "too cold" shelf. See the chapter "Temperature inside the refrigerator".</p>
<p><b>There is water on the cooling plate inside the refrigerator.</b></p>	<p>This is normal. During automatic defrosting, frost thaws on the cooling plate.</p>
<p><b>Water is running inside the refrigerator.</b></p>	<p>Clean the water drain and drain hole inside the refrigerator using e.g. cotton swabs or a bottle cleaner brush.</p> <p>Some food products could have been placed near the rear of the appliance preventing the water from running into the drain.</p>
<p><b>Water comes out on the floor.</b></p>	<p>Place the drain hose at the back of the cabinet above the drain bowl. See the chapter "Before using the cabinet the first time".</p>
<p><b>It is too warm inside the freezer.</b></p>	<p>Set a lower temperature.</p> <p>Make sure that the door is completely closed and that the insulating strip is complete and clean.</p> <p>If warm food products have been put inside the freezer, wait for a couple of hours and then check the temperature again.</p> <p>Distribute the food products to allow cold air to circulate around them.</p>
<p><b>It is too cold inside the freezer.</b></p>	<p>Set a warmer temperature.</p> <p>Action Freeze could have been switched on.</p> <p>The temperature display shows the highest temperature inside the cabinet. Thus a difference between the temperature indicated on the display and the (average) temperature measured in another way is normal.</p>

<b>Too much frost and ice are produced.</b>	Make sure that the door is completely closed and that the insulating strip is complete and clean. Set a warmer temperature.
<b>The compressor operates continuously.</b>	Set a warmer temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.
<b>The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.</b>	The power plug is not properly connected. The fuse has blown. The cabinet is not switched on. Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.)
<b>Sound level in cabinet is too high.</b>	The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet. If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet not touch each other. Carefully bend them if they do. If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again. Carefully follow the instructions in the chapter "Installing the cabinet".
<b>Power failure</b>	Do not unnecessarily open the cabinet, except when the power cut seems to be long, in which case the food products should be moved to another cabinet that works. If the frozen products are still hard following the power cut, they may be immediately refrozen. If the food products have thawed but are still fresh, they may be used, however they should be prepared before re-freezing or eating them.

## Guarantee Conditions

See Guarantee Conditions on the Registration Card.

## Customer Care Department

For general enquiries concerning your Electrolux appliance or further information on Electrolux products, you are invited to contact our Customer Care Department by letter or phone as follows:

Customer Care Department  
Electrolux  
55-77 High Street  
Slough  
Berkshire  
SL1 1DZ

Phone: 08705 950950 \*

\* calls to this number may be recorded for training purposes

## Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts please contact

your local Electrolux Service Force Centre by telephoning:

XXXXXXXXXXXX

Your call be routed the Service Force Centre covering your post code area. The address of your local Service Force Centre is detailed in the accompanying Customer Care Book.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working"

When you contact the Service Centre you will need to give the following details. They will be found inside your appliance.

MOD (modell):.....

PROD.NO (model number):.....

SER:NO (serial number):.....

Purchase date.....

# Technical specification

GB

<b>Model</b>	ERB3400/ERB3400X
<b>Volume fridge</b>	240 l
<b>Volume freezer</b>	82 l
<b>Width</b>	595 mm
<b>Height</b>	1800 mm
<b>Depth</b>	600 mm
<b>Energy consumptions</b>	343 kWh/y
<b>Energy clas</b>	A
<b>Rated power</b>	160W
<b>Freezing capacity</b>	12 kg/24 h

## Installation

GB

### Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling. For more information, contact your local city office or the dealer.



Do not allow children to play with the packaging. The plastic film can cause suffocation.

### Remove the transport supports



Remove the tape and the transport supports from

- the door sides
- inside the door hinges
- the shelves

Remove the transport support on the glass shelf by pushing the support forward along the edge of the shelf until it stops. Take hold of the rear edge of the glass shelf and pull the shelf and transport support forward until the shelf tilts and the transport support can be removed. Some models are fitted with a silencing pad under the cabinet. Do not remove this pad.

### Cleaning

Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth.

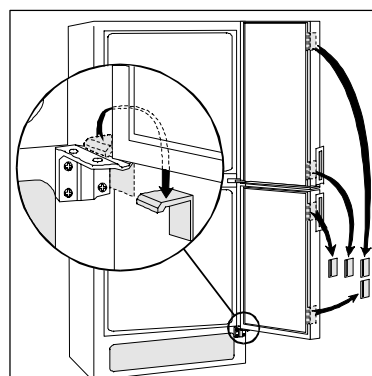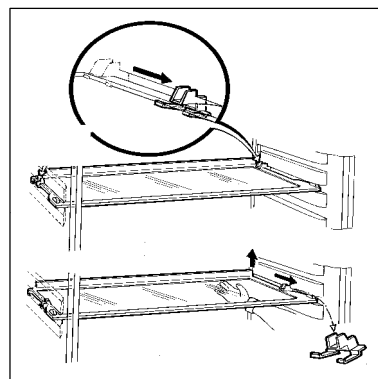

## Installing the cabinet

When two appliances are placed beside each other, the distances enclosed in the plastic wrapping should be glued between the appliances. As shown in the illustration.

To obtain the best performance from the cabinet, ensure :

- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.
- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.
- there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 200 cm<sup>2</sup>. The ventilation space can either be
  - a) directly above the cabinet, or
  - b) behind and above the top cupboard. In this case, the space behind the cupboard must be at least 50 mm deep.

Cabinet is placed at a location whose ambient temperature corresponds to the climate classification\*, for which the appliance is designed.




\* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

Check that the drain hose at the rear of the cabinet discharges into the drip tray.

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 10 mm to allow the door to open enough so that the shelves can be removed.

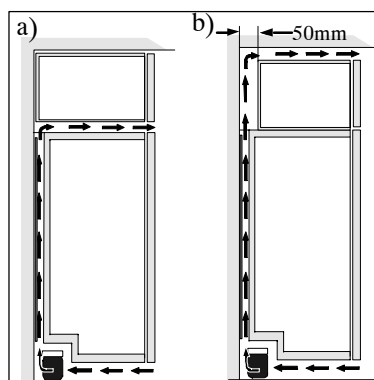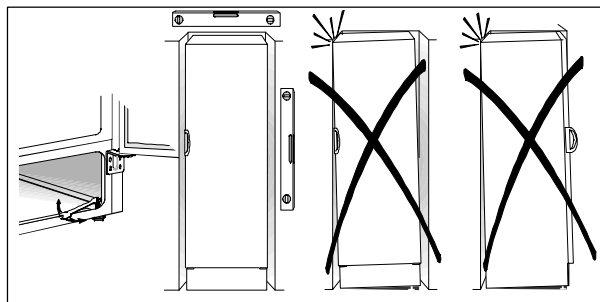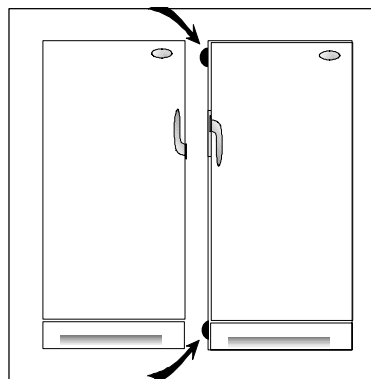








## Door Reversal

1. Close the cabinet and remove the plug from the electrical socket.
2. Remove the ventilation grille. There is a part on the grille that can be removed. Reposition it and put it on the other side.
3. Put the cabinet on a wooden board when it is laid down. Later, when raising the cabinet, it will be easier to grip under the cabinet thanks to the board.
4. Unscrew the lower hinge and remove the lower door. Unscrew the upper hinge pin and remove the upper door.
5. On the centre beam:  
Remove the plastic plugs by driving a drift into them and rocking them loose.  
Move the centre hinge unit to the other side. Flatten the threads in the holes remaining from the hinges and insert new plastic plugs.
6. On the doors: Change the positions of the door fittings. Put a new plug in the hole on the lower door.
7. Replace the upper door and secure the upper hinge pin.  
Replace the lower door. Change the position of the hinge pin of the lower hinge. Then secure the hinge. Remove any play in the door by adjusting the height of the lower hinge with the supplied spanner. Secure with the lock-nut.
8. Raise the cabinet and replace the ventilation grille.
9. To transfer the handle.  
Unscrew the screws. Fit the handle onto the opposite side by turning it one half circle.
10. Put the cabinet in position. Check that it stands straight. See the section "Positioning the cabinet".

## Electrical connection

Connect the cabinet to a grounded electrical outlet.  
Voltage: 230 V.  
Fuse: 10 A.  
Refer to the rating plate on the left inside the cabinet.

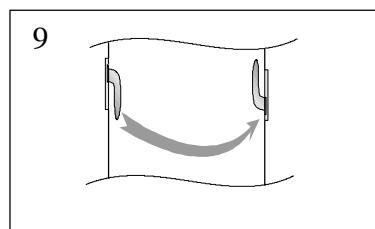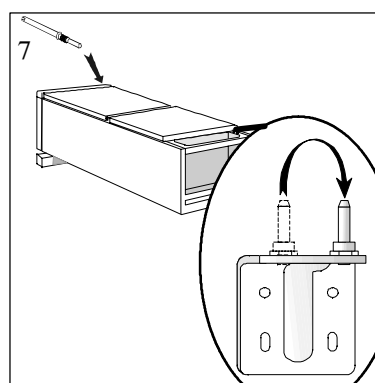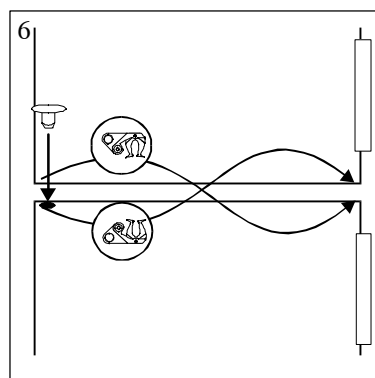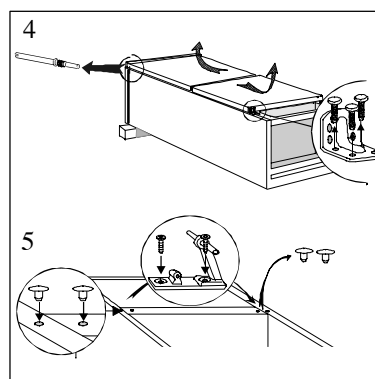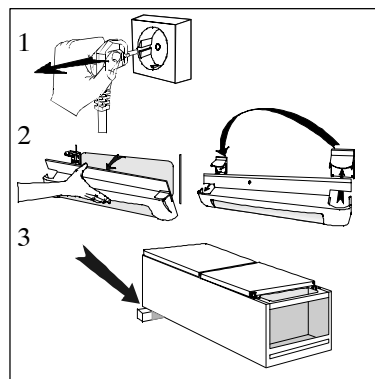

## **The Electrolux Group. The world's No.1 choice.**

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.*

*Le Groupe Electrolux est le premier fabricant mondial d'appareils domestiques, d'entretien et pour l'extérieur. Plus de 55 millions de produits du Groupe Electrolux (tels que réfrigérateurs, cuisinières, lave-linge, aspirateurs, tronçonneuses, tondeuses à gazon) sont vendus chaque année pour un montant d'environ 14 milliards d'euros dans plus de 150 pays à travers le monde.*

*Die Electrolux-Gruppe ist der weltweit größte Hersteller von gas- und strombetriebenen Geräten für die Küche, zum Reinigen und für Forst und Garten. Jedes Jahr verkauft die Electrolux-Gruppe in über 150 Ländern der Erde über 55 Millionen Produkte (Kühlschränke, Herde, Waschmaschinen, Staubsauger, Motorsägen und Rasenmäher) mit einem Wert von rund 14 Mrd. USD.*

*Il Gruppo Electrolux è il più grande produttore mondiale di apparecchiature per la cucina, per la pulizia e di attrezzature per il giardinaggio e per uso forestale. Oltre 55 milioni di prodotti del Gruppo Electrolux (quali frigoriferi, cucine, lavabiancheria, lavastoviglie, aspirapolvere, motoseghe e rasaerba) vengono vendute ogni anno in più di 150 Paesi del mondo per un valore di circa 14 miliardi di dollari.*

*De Electrolux Groep is de grootste producent ter wereld van aangedreven apparaten voor gebruik in de keuken, reinigingswerkzaamheden en voor gebruik buitenshuis. In meer dan 150 landen over de hele wereld worden ieder jaar meer dan 55 miljoen Electrolux producten (zoals koelkasten, fornuizen, wasautomaten, stofzuigers, kettingzagen en grasmaaiers) verkocht ter waarde van circa USD 14 miljard.*

*Electrolux Gruppen er verdens største producent af energidrevne produkter til køkken- rengørings- og udendørs brug. Der sælges årligt over 55 millioner produkter fra Electrolux Gruppen (blandt andet køleskabe, komfurer, vaskemaskiner, støvsugere, motorsave og plæneklippere) til en værdi af ca. kr. 100 milliarder. Produkterne sælges i mere end 150 lande verden over.*

*El Grupo Electrolux es el mayor fabricante del mundo de aparatos para la cocina, limpieza y uso exterior. Más de 55 millones de productos del Grupo Electrolux (frigoríficos, congeladores, cocinas, lavadoras, aspiradores, motosierras y cortacéspedes) se venden cada año por un valor aproximado de 14 billones de US\$ en más de 150 países del mundo.*

